

### **Firing Pin Kit Installation Instructions:**

- 1. Remove lever screw and take the lever and bolt out of rifle. With 1/8 inch punch, drive out the two roll pins holding in the firing pin. Remove the two piece firing pin and flat spring. Drop in one piece pin and line up the slots. Drive the two roll pins in the bolt.**
- 2. The small spring is for the lever button. With 1/16 punch, drive out the pin that retains the button. Change the spring and replace retainer pin. With the stock off, locate the arm spring holding down the trigger block behind the trigger. It's located at the bottom of the floor plate. Using needle nose pliers or a small screw driver, take some tension out of the arm spring by bending it up. Caution, a little goes a long way.**
- 3. The large spring and washer are for the hammer. Remove stock. Push retainer holding hammer spring out to one side. Place the washer on hammer strut first followed by the new spring. Reinstall retainer. Note: Washer not necessary for most rifles.**